



COTTON CANDY MACHINE

01. Just turn it on, wait for it to warm up (about 5 min)
02. Pour in the sugar, and this machine starts producing cotton candy as fast as you can collect it!
03. Collect the delicate webs of cotton candy on cones above the bowl.
04. Do not turn off machine until all of the sugar has been purged from the spinner to avoid the sugar burning into the head.

A quick cleaning after every 20 minutes of use is required for optimal operation and to prevent the buildup of burned sugar. While on and still hot, pour in a little water in the center - wait for it to clean, then turn off, and wipe down the bowl. After use, remove the cover and bowl and spray with hot water to clean.

Please do not use artificial sugars unless formulated for cotton candy production. If using hard candy, use only corn syrup-based candies that are made from basic ingredients to prevent burning and clogging (ingredients such as butter and starches should be avoided).

A \$10 cleaning fee may apply if unit returned dirty. If excessive sugar is burned on the head, a \$50 fee will apply to replace the head.